

CARE INSTRUCTIONS

- Hand wash in warm, soapy water before using.
- 50% Wheat Fibre used in manufacturing means 50% less plastic.
- BPA Free.
- Suitable for hot and cold foods.
- Compartments are not leakproof.
- Safe for microwave heating only — do not use for cooking. Keep the lid slightly open during microwave use.
- The bamboo lid is not dishwasher safe; hand washing is recommended.
- Not suitable for freezing.
- Do not use bleach or chlorine-based cleaning agents.
- Keep out of reach of children when containing hot food.

INSTRUCTIONS FOR USE

This is a two-compartment food storage container with cutlery stored under the bamboo lid/cutting board.

1. Unlock the lid lock tabs securing the bamboo lid in place.
2. Remove the lid, then take out the inner storage tray.
3. Place the inner storage tray underneath the main tray and lower the tray lock tabs until they securely latch the lower tray.
4. Snap the lid lock tabs into position as needed.

